



Double Wall Oven

FPET3085PF

30" Electric



Signature Features



PowerPlus® Preheat
Preheat in less than six minutes.¹



PowerPlus® Convection
With our PowerPlus® Convection, the heat is evenly distributed for faster and more even baking and roasting — perfection in less time.



Effortless™ Convection
Takes the guesswork out of convection cooking — our oven automatically adjusts standard baking temperatures to convection temperatures for consistent results.



Effortless™ Temperature Probe
Take the guesswork out of cooking with the Effortless™ Temperature Probe that shows you the internal cooking temperature of your food. You can set the desired finished temperature and the oven alerts you when that temperature has been reached.

Product Dimensions

| | |
|--------|----------|
| Height | 50-7/16" |
| Width | 30" |
| Depth | 24-3/4" |

More Easy-To-Use Features

One-Touch Keep Warm Setting
Just one touch of a button keeps food warm until everything — and everyone — is ready.

Steam Cleaning
A light oven cleaning that's chemical-free, odor-free, and fast.

Smudge-Proof™ Stainless Steel
Reduces fingerprints and smudges so it's easy to clean.

Built with American Pride
Appliances that are high-performing, more accessible, and more innovative than ever — designed, built, and engineered in the U.S.A.

PowerPlus® Broil
Added power means you can broil food more evenly.

Even Baking Technology
Our Even Baking Technology ensures even baking every time.


Delay Start
Set your oven to begin cooking on your schedule. It can be programmed from one to 24 hours.

SpaceWise® Half Rack
Flexible rack system that adjusts to cook multiple dishes at once. Remove the half rack and you'll have extra height for tall dishes.

"My Favorite" Settings
Easily program your most used setting with the touch of a button.

Sabbath Mode (Star-K® Certified)


Available in:



Stainless
(F)

¹Based on single rack cooking performance, not set temperature, using PowerPlus® Preheat.

| Features | |
|---|---|
| Oven Control/Timing System | Pro-Select® |
| Windows | Extra-Large with Pro-Tint Finish |
| Exterior Door Finish | Smudge-Proof™ Stainless Steel |
| Handle Design | Stainless Steel |
| Oven Cleaning System | Self-Clean w/ Steam Clean Option |
| Oven Controls | |
| Bake/Broil | Yes/Variable (400 - 550 °F) |
| Effortless™ Convection Conversion | Yes |
| Convection Bake/Broil/Roast | Yes/Yes/Yes |
| Oven Preheat | PowerPlus® |
| My Favorite | Yes |
| Slow Cook | Yes |
| Effortless™ Temperature Probe | Yes |
| Chicken Nugget Button | |
| Pizza Button | |
| Keep Warm | Yes |
| Add-a-Minute | |
| Delay Start | Yes |
| Self-Clean/Clean Options | Yes/2, 3, 4 Hours |
| Steam Clean | Yes |
| Delay Clean | Yes |
| Kitchen Timer/Timed Cook Option | Yes/Yes |
| Control Lock | Yes |
| Auto Oven Shut-Off | Yes |
| Oven Lock-Out | Yes |
| Upper Oven Features | |
| Capacity (Cu. Ft.) | 4.6 |
| Convection System | PowerPlus® Convection |
| Oven Light | 2 Halogen |
| Hidden Bake Element | Yes |
| Rack Configuration | 1 Heavy Duty, 1 SpaceWise® Half Rack, 1 Offset Rack |
| Baking System | Even Baking Technology |
| Broiling System | PowerPlus® Broil |
| Bake/Broil Element (Watts) | 2,000 / 4,000 |
| Lower Oven Features | |
| Capacity (Cu. Ft.) | 4.6 |
| Convection System | PowerPlus® Convection |
| Oven Light | 2 Halogen |
| Hidden Bake Element | Yes |
| Rack Configuration | 1 Heavy Duty, 1 SpaceWise® Half Rack, 1 Offset Rack |
| Baking System | Even Baking Technology |
| Broiling System | PowerPlus® Broil |
| Bake/Broil Element (Watts) | 2,000 / 4,000 |
| Optional Accessories | |
| 3"-High Stainless Steel Bottom Trim | PN # 318259707 |
| 10'-Long Armored Power Cable | PN # 903056-9010 |
| Certifications | |
| A.D.A. Compliant | |
| Sabbath Mode (Star-K® Certified) | Yes |
| Specifications | |
| Oven Interior (H x W x D) | 17-1/2" x 24-1/8" x 18-3/4" |
| Power Supply Connection Location | Left Bottom Rear |
| Voltage Rating | 240V / 208V / 60Hz |
| Connected Load (kW Rating) @ 240/208 Volts¹ | 9.5 / 7.1 |
| Amps @ 240/208 Volts | 39.6 / 34.1 |
| Minimum Circuit Required (Amps) | 40 |
| Shipping Weight (Approx.) | 280 Lbs. |

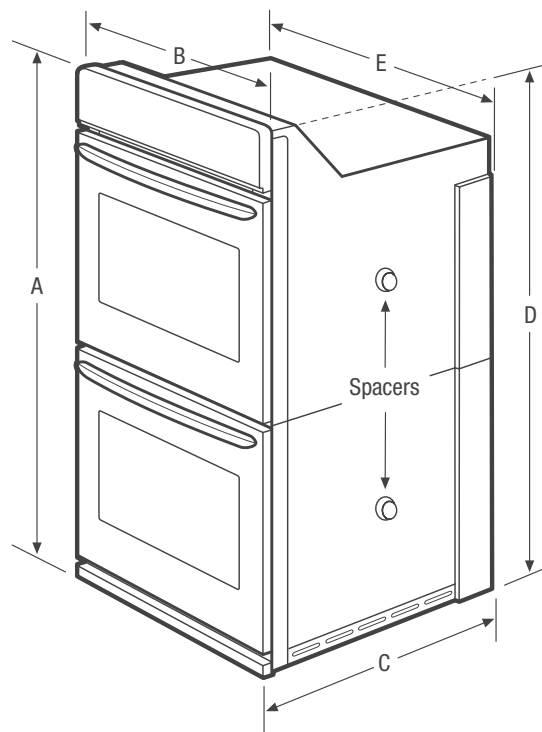

NOTE: For planning purposes only. Always consult local and national electric codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com.



| Product Dimensions | | Cutout Dimensions | |
|--------------------------|----------|------------------------|-------------------|
| A - Height | 50-7/16" | Height (Min.) / (Max.) | 48-7/8" / 49-7/8" |
| B - Width | 30" | Width (Min.) / (Max.) | 28-1/2" / 29" |
| C - Depth | 24-3/4" | Depth (Min.) | 23-1/2" |
| D - Height (Wrapper) | 48-5/8" | | |
| E - Width (Wrapper) | 28-1/4" | | |
| Depth with Door Open 90° | 45-3/4" | | |

¹Single phase 3- or 4-wire cable, 120 / 240 or 120 / 208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.

Accessories information available on the web at frigidaire.com


FRIGIDAIRE

USA • 10200 David Taylor Drive • Charlotte, NC 28262 • 1-800-FRIGIDAIRE • frigidaire.com
 CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • frigidaire.ca

FPET3085P 09/13

© 2013 Electrolux Home Products, Inc.


Specifications
subject to change.



Specifications
subject to change.

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at frigidaire.com.


Front

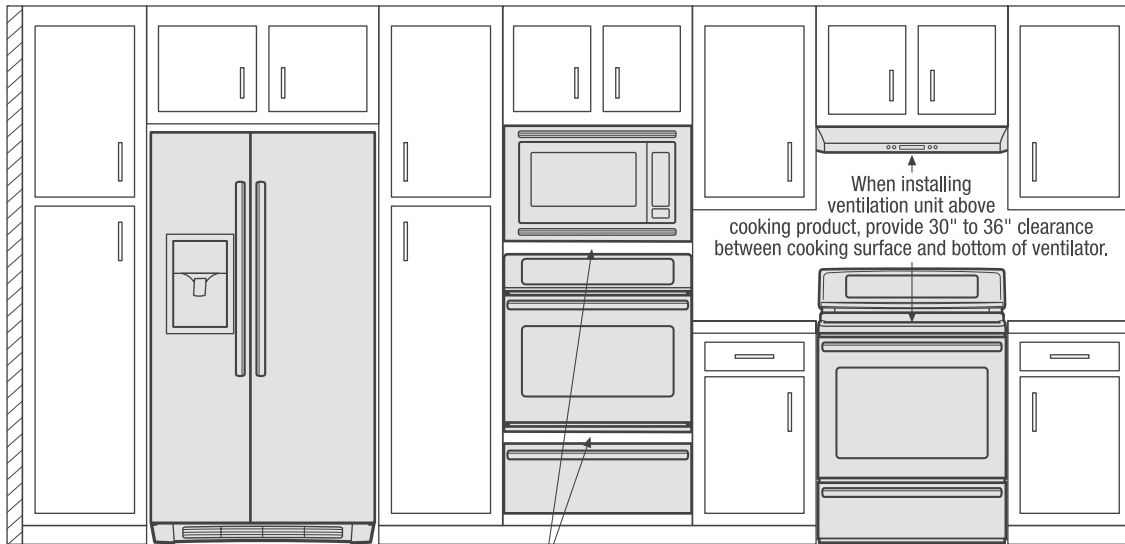

When installing built-in cooking appliances in combination, 2"-high minimum visible gap between appliance faceplates required.

Clearance information for cooking appliances, provided in specific product's installation guide.


Top

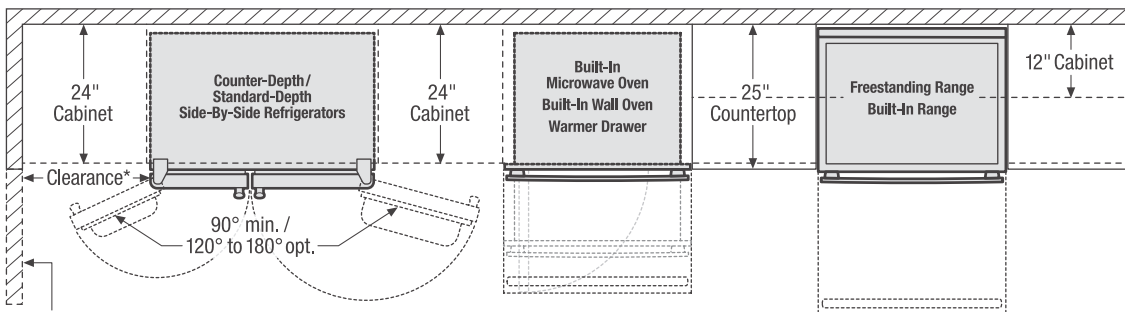

*When installing side-by-side refrigerator adjacent to wall, cabinet or another appliance that extends beyond front edge of unit, 20" minimum clearance recommended to allow for optimum 120° to 180° door swing, providing complete drawer/crisper access and removal. (Absolute 4-1/2" minimum clearance will ONLY allow for 90° door swing which will provide limited drawer/crisper access with restricted removal.)


When installing appliance with sliding drawer, swinging or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swings.

Top

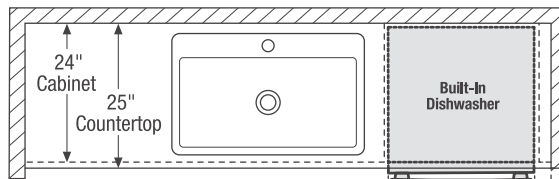

When installing appliance with sliding drawer or drop-down door adjacent to wall, cabinet, or other obstruction that extends beyond front edge of appliance, allow 2" minimum clearance between drawer or door and obstruction.


Front

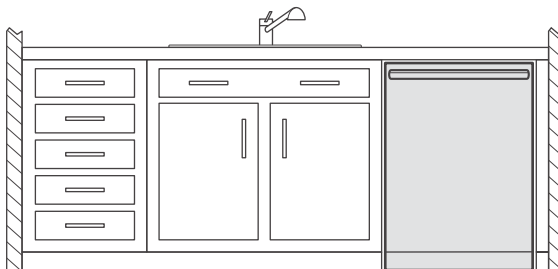

When installing appliance with sliding drawer or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swing.

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at frigidaire.com.


Front

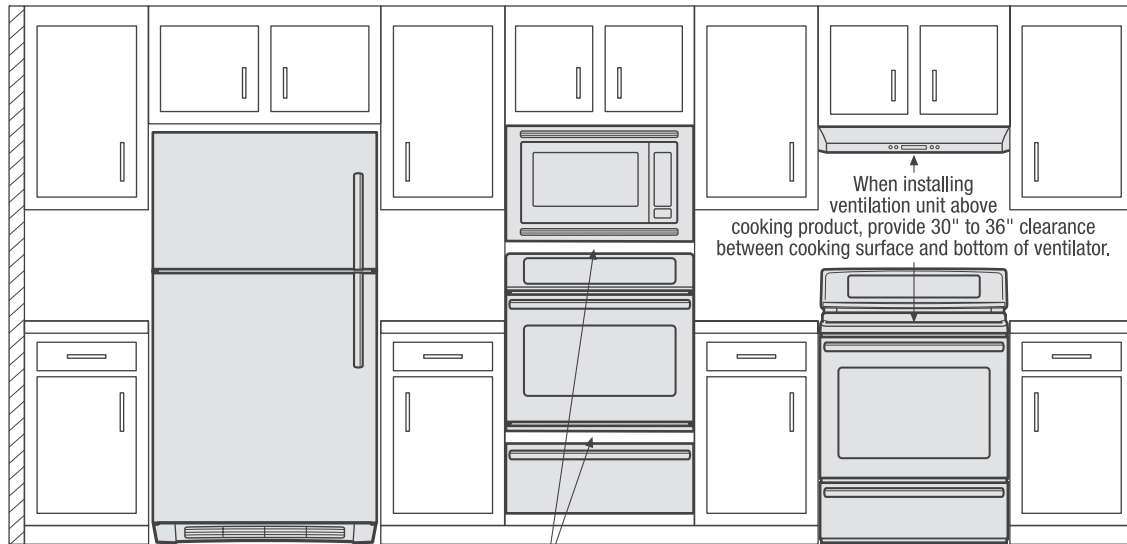

When installing built-in cooking appliances in combination, 2"-high minimum visible gap between appliance faceplates required.

Clearance information for cooking appliances, provided in specific product's installation guide.


Top

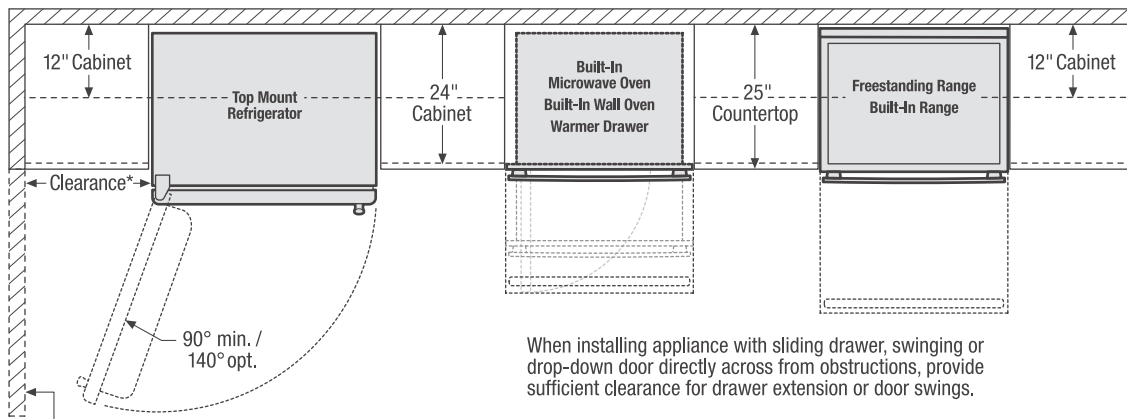

When installing appliance with sliding drawer, swinging or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swings.


*When installing top mount refrigerator adjacent to wall, cabinet or other appliance that extends beyond front edge of unit, 20" minimum clearance recommended to allow for optimum 140° door swing, providing complete crisper access and removal. (Absolute 3" minimum clearance will ONLY allow for 90° door swing which will provide limited crisper access with restricted removal.)

Top

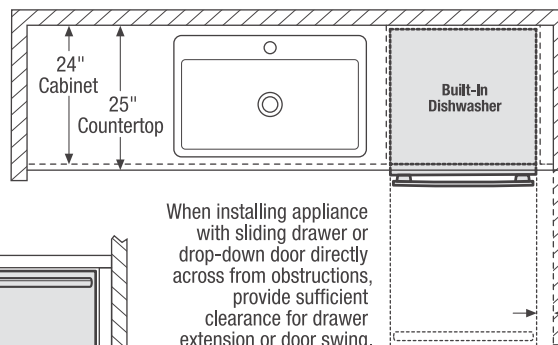


When installing appliance with sliding drawer or drop-down door adjacent to wall, cabinet, or other obstruction that extends beyond front edge of appliance, allow 2" minimum clearance between drawer or door and obstruction.

Front

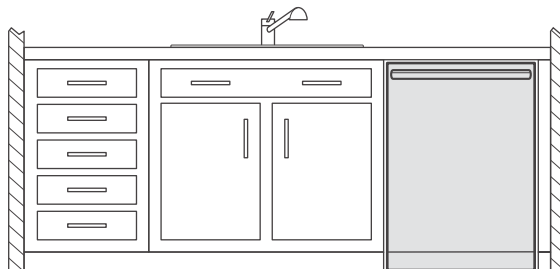

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at frigidaire.com.


Front

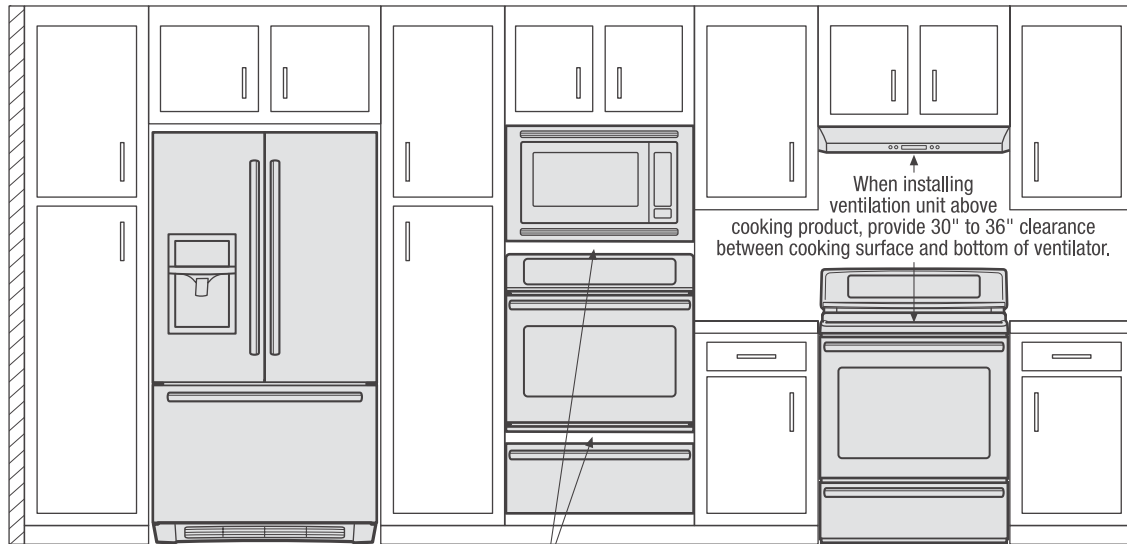

When installing built-in cooking appliances in combination, 2"-high minimum visible gap between appliance faceplates required.

Clearance information for cooking appliances, provided in specific product's installation guide.


Top

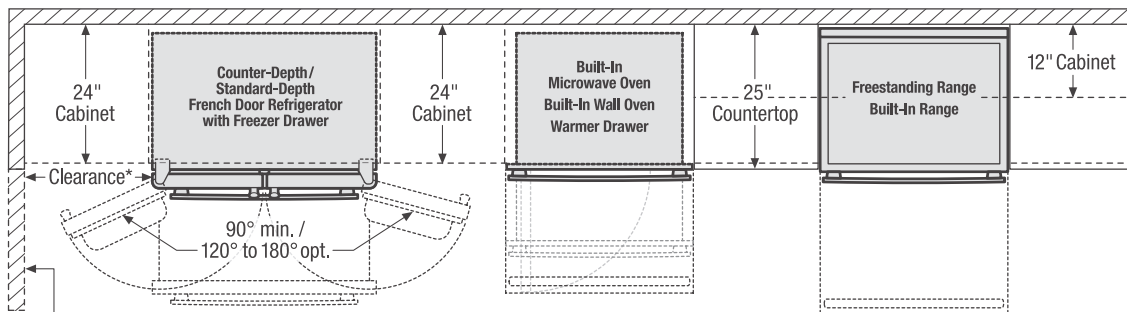

*When installing French door refrigerator adjacent to wall, cabinet or another appliance that extends beyond front edge of unit, 20" minimum clearance recommended to allow for optimum 120° to 180° door swing, providing complete drawer/crisper access and removal. (Absolute 4-1/2" minimum clearance will ONLY allow for 90° door swing which will provide limited drawer/crisper access with restricted removal.)


When installing appliance with sliding drawer, swinging or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swings.

Top

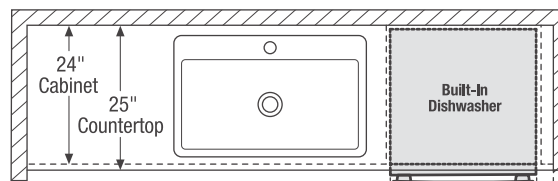

When installing appliance with sliding drawer or drop-down door adjacent to wall, cabinet, or other obstruction that extends beyond front edge of appliance, allow 2" minimum clearance between drawer or door and obstruction.

Front

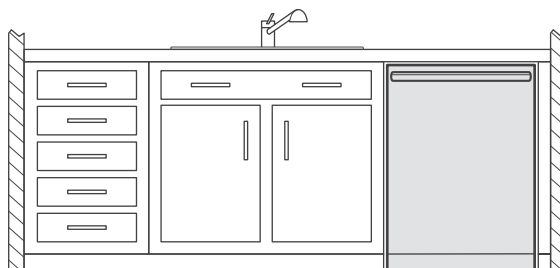

When installing appliance with sliding drawer or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swing.

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at frigidaire.com.

